
ILLUSTRATION

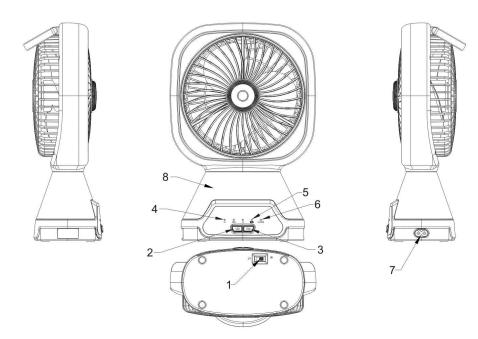

- 1. ON/OFF Switch
- 2. LED Switch
- 3. Fan Switch
- 4. Fan Speed Indicator
- 5. Battery Power Indicator
- 6. Charge Indicator
- 7. AC Socket
- 8. LED Night Light

ENVIRONMENTAL PROTECTION



Waste electrical & Electronic equipment regulations requires that any of our products showing this marking must not be disposed of with other household or commercial waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate any such products from other waste types and recycle it responsibly at your local facilities.



Mini Fan



PRODUCT CODE

F84

Cape Town - 9 Racecourse Road, Milnerton, 7441 Johannesburg - 10 Milkyway Avenue, Linbro Business Park, Sandton, 2065 email: admin@eurolux.co.za web: www.eurolux.co.za

Please read instructions before commencing installation and retain for future reference.

IMPORTANT SAFEGUARDS

F84 - attachments:

If the external flexible cable or cord of this luminaire is damaged, it should be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard. To ensure that you get maximum longevity and maximum use out of your luminaire, please observe the following safety instructions.



A Electrical products can cause death, injury, or damage to property. Installation of the luminaire must be carried out by a qualified electrician, in accordance with SANS 10142. On completion of installation, ensure that the Certificate of Compliance is updated.

- Before connecting the Fan, ensure that voltage indicated on the rating label Corresponds with the mains voltage in your home.
- This Fan is checked in full for conformity to the quality standards and safety requirements.
- The manufacturer / supplier is not responsible for any damage of properties and persons, caused by the incorrect use or installation of the Fan.

IMPORTANT:

- Tampering with this Fan, will invalidate your warranty.
- Please check whether the connection of the power cord is safe and reliable before use.
- Always ensure that the mains supply voltage is correct.
- Choking hazard: May contain small parts. Keep away from children.
- Do not insert your fingers or any part of your body into the electrical contact and sockets of this product whilst it is connected to the electrical supply.
- Item may vary slightly from the picture on the carton.

SPECIFICATIONS

• Battery: 4V 3Ah rechargeable lead-acid Battery

· Charge time: 12-15 hours

Fan Duration:

2 hours / Fan high speed 4 hours / Fan medium speed 6.5 hours / Fan low speed

LED Light Duration:

3 hours / Bright

9 hours / Medium brightness

35 hours / Dim

• Dimension: 205mm x 85mm x 262mm

• Voltage: 220-240V 50Hz

OPERATION

IMPORTANT:

- · Please read this manual carefully before you start using this luminaire in full charge.
- Make sure that the voltage is correct before plug-in.
- · Charge the luminaire when light goes dim.
- Turn off the switch when the luminaire is not in use.
- The efficiency may decrease if the luminaire is used or charged when temperature is below 32F (0'C) or above 104F (40'C).
- To avoid damage to the luminaire, please do not use any other than the specified battery.
- To avoid electrical shock, please do not open the luminaire unless by a qualified person.

How to recharge

- Ensure that the lamp is turned off during charging to prolong battery life.
- Make sure the voltage is correct before charging luminaire.
- · Plug into the mains electrical supply.
- Charge the lamp periodically for at least 8 hours while not in use for over 3 months to prolong the battery life.

Operation:

- Press LED button consecutively for Bright / Medium / Dimm / off
- Press FAN button consecutively for low speed / Medium speed / High speed / off
- · Press ON / OFF button to turn Fan on and off